


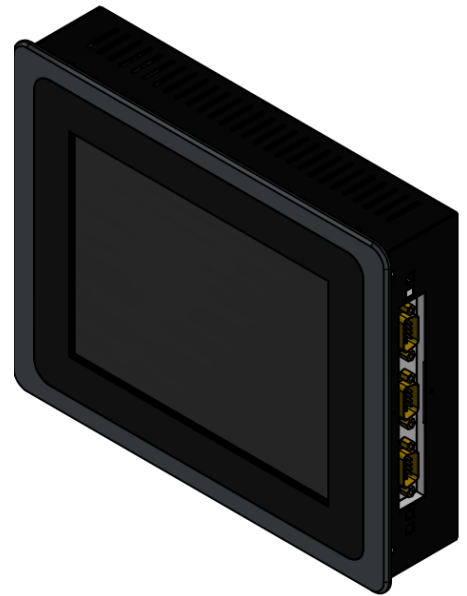

**8" Touch Panel Display System
Hardware Overview Guide (P/N:AQ9900008)**



sales@acuitylaser.com

Tel: +1 503.227.7908

Fax: +1 503.223.1258

acuitylaser.com

©2022 Schmitt Measurement Systems

2765 NW Nicolai St.

Portland, OR 97210 USA

1. Setup

- 1.1. When ordering the **(AQ9900008)** TPD, for hardware, you will receive the touch panel display, TPD power supply, and (4) mounting screws.



- 1.2. Connect the laser connection kit(s) to the port(s) on the left and/or right side of the TPD with a DB-9 cable. Ensure the laser is powered up. When using a single laser, please use port A if possible.



- 1.3. Connect the power cable to the TPD and a power source. Power cable port located on bottom of unit.



- 1.4. Power up the TPD by pushing the silver button on the top left side of the TPD. The power indicator on the front of the TPD will light up blue.



- 1.5. Upon initial power up, the TPD will boot into the **Settings** screen after approximately 30 seconds. Please see the software manual for further instructions on best operating the TPD software.