



Productivity through Precision.

part of Schmitt Measurement Systems, Inc.
8000 NE 14th Place
Portland, Oregon 97211, USA
Tel.: +1 503 210 5733 Fax: +1 503 223 1258
www.acuitylaser.com

Acuity® AR200 Ordering Guide

AR200 Part Number Information

AR200	
Part#	Description
AR200 Laser Sensors	
AP2000600	AR200-6
AP2001200	AR200-12
AP2002500	AR200-25
AP2005000	AR200-50
AP2010000	AR200-100
AR200 Cables *	
CBA200105	Cable ASSEMBLY: AR200, 5M, STRAIGHT
CBA200110	Cable ASSEMBLY: AR200, 10M, STRAIGHT
CBA200205	Cable ASSEMBLY: AR200, 5M, RIGHT ANGLE
CBA200210	Cable ASSEMBLY: AR200, 10M, RIGHT ANGLE
AR200 Connectivity Kits	
AQ7000001	Connectivity Kit – US Plug
AQ7000002	Connectivity Kit – EU Plug
AQ7000005	Connectivity Kit – US Plug (w/ serial to USB adapter)
AQ7000006	Connectivity Kit – EU Plug (w/ serial to USB adapter)
AR200 Touch Panel Display	
AQ9900008	Touch Panel Display – 8" Screen

* Cables need to be selected and included in your order.

See page 2 for ordering descriptions.

Acuity® AR200 Ordering Guide

Ordering Descriptions

Connectivity Kits: Acuity sells a connectivity kit to aid in connecting your laser to a power supply and serial port. This product includes a 120V, 15 VDC, AC power supply; a serial cable with DB9 connector; and a solid-state, NEMA-4X interface box. The interface box includes two sets of terminal blocks for simple input (from sensor) and output (to your selected device), a DB9 male serial connector out, and a barrel style power connector in. You can either pass through the wiring to another unterminated cable, connect a DB9 serial cable directly to the interface box, or both at the same time.

AQ7000001 - 120 V version with a US-style plug

AQ7000002 - 240 V version with a European-style plug

AQ7000005 - w/ serial to USB cable for ease of connection into industrial computers - US plug

AQ7000006 - w/ serial to USB cable for ease of connection into industrial computers - Euro plug

Touch Panel Display (AQ9900008): Stand-alone terminal interface for use with Acuity laser distance sensors. These fully enclosed units replace panel meters, alphanumeric displays, and analog controllers by providing a modern interface through a full-color LCD and touch screen. The Touch Panel Display communicates with up to 6 Acuity sensors using RS-232 serial interfaces. The touch panel can be easily configured using on-screen buttons to display, scale, and even graph the sensors' distance outputs. Relative dimensions can be measured using a tare function. With two Acuity sensors paired together, the touch panel can serve as a thickness gauge. Limits can be programmed into the touch panel to give a visual warning to operators that the target is too close or too far or too thick or too thin. With a USB flash drive, measurements can be logged and saved for further analysis.

Cables: Cables are ordered separately. If longer cables are needed, speak to your Acuity representative.